

# Quantum dial-RF

## Linking guide





Learn to link your Quantum dial-RF thermostat with your Quantum wiring centre-RF, either offline or online using the Quantum hub and the Smart Home app.

## Contents


1. Offline mode
2. Online mode
3. Factory reset

## 1. Linking in offline mode

To begin linking in offline, hold the button for 5 seconds on the Quantum coordinator on the Quantum wiring centre-RF. This is located in the top right hand corner as shown below.



**Quantum coordinator**

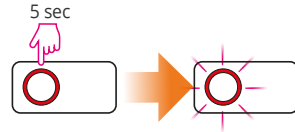

### Network LED statuses:



(LED is blinking) - wiring centre is not connected to the network, but it is ready for pairing with the Quantum coordinator for the ZigBee network.

 


(LED is lit steady) - wiring centre is added to the ZigBee network and paired with the Quantum coordinator.

### Checking the address of the wiring centre.



To check the address of the wiring centre in the ZigBee network, press the Pair button. The wiring centre number is indicated by the number of LEDs at the zones (this number is known as the control box number on the Quantum thermostat.)




The wiring centre set up is now complete. In order for the rest of the set up to work correctly, do not touch the wiring centre until all the thermostats are connected.


## Installing Quantum dial-RF thermostats

### Power up sequence

Insert batteries into the Quantum dial-RF thermostat, then use the overlay sticker (initial process only) to set up the correct zones. (Picture shows the difference.)

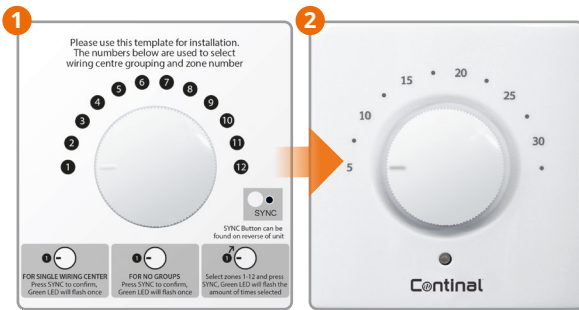

### Linking to the wiring centre

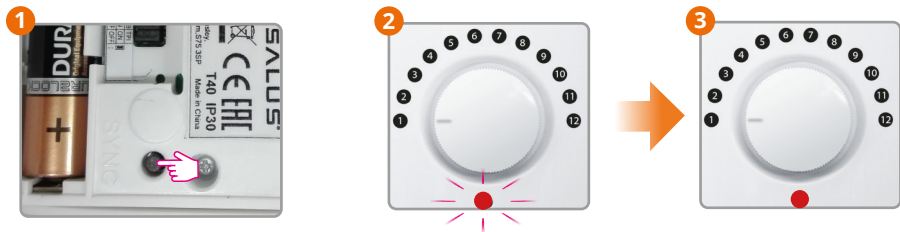


Press the SYNC button for 3 seconds until it flashes red.

The Quantum dial thermostat-RF has joined the network once the LED is solid red.


## Set the wiring centre number

1WC = position 1 – 2WC position 2 and so on.

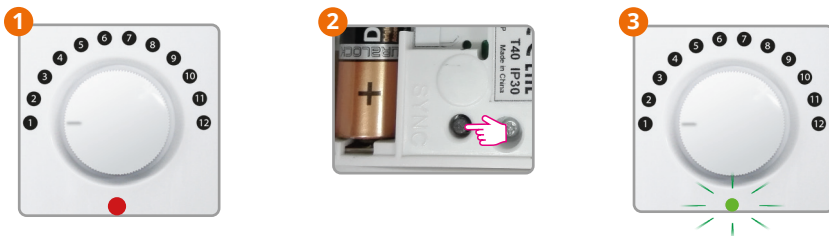


## Set the group number

No group = position 1.

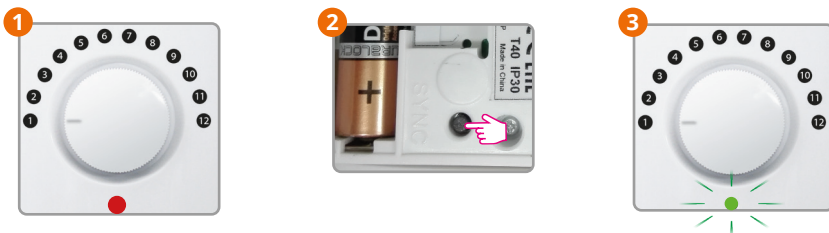


## Set the zone number

Zone 1 = position 1 – zone 2 = position 2 and so on.

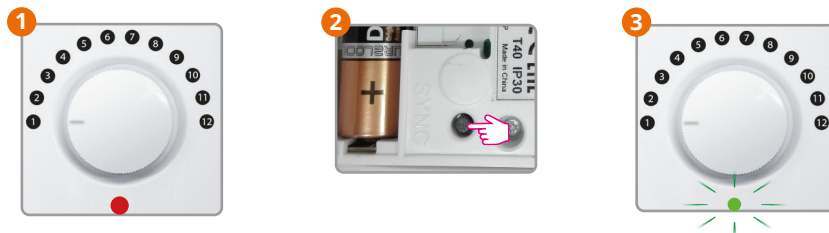


Repeat the process with the remaining Quantum thermostats.

## Complete the linking process

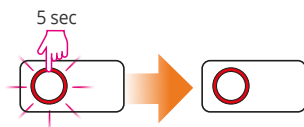

Once the process has been complete, do not disconnect the wiring centre from the mains for at least 30 minutes. After this time the thermostats will memorise the locations and will automatically re-connect if the mains are disconnected.

## 2. Linking in Online mode

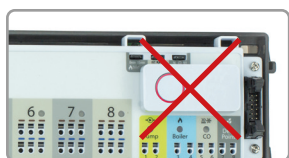

To begin set up in online mode, first remove the Quantum Coordinator. If the system has been set up in Offline mode previously, both the wiring centre and thermostats will need to be factory reset (Page 7 of this document).


## Power on your Quantum hub




Ensure the Quantum hub is connected to the internet and you have downloaded the Salus Smart Home app on to your mobile phone or tablet. (See the Quantum hub quick guide.)

## Connect to the wiring centre


Open your Salus Smart Home app on your mobile device and follow the steps below.

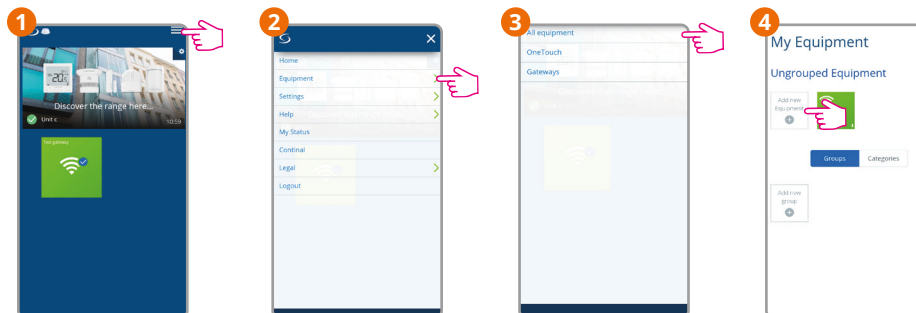

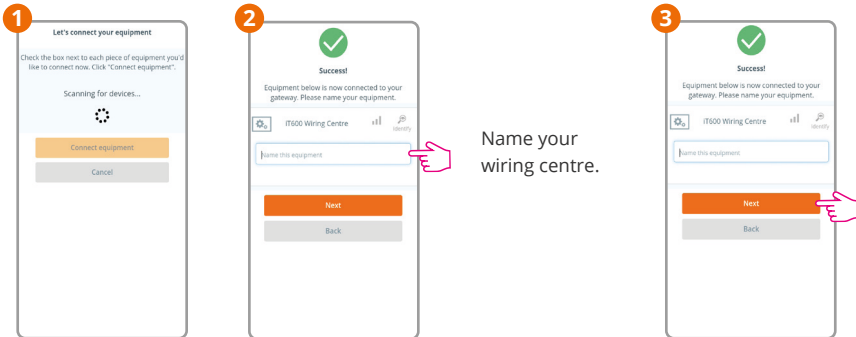

## Connect the Quantum thermostat


Power on Quantum dial-RF thermostat as seen below

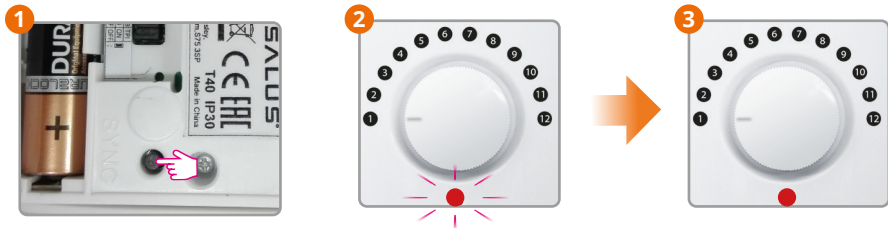




Press the SYNC button for 3 seconds until it flashes red.

The Quantum dial thermostat-RF has joined the network once the LED is solid red.


Open your Salus Smart Home app on your mobile device and follow the steps below to connect your thermostat. (Thermostats should be connected individually.)

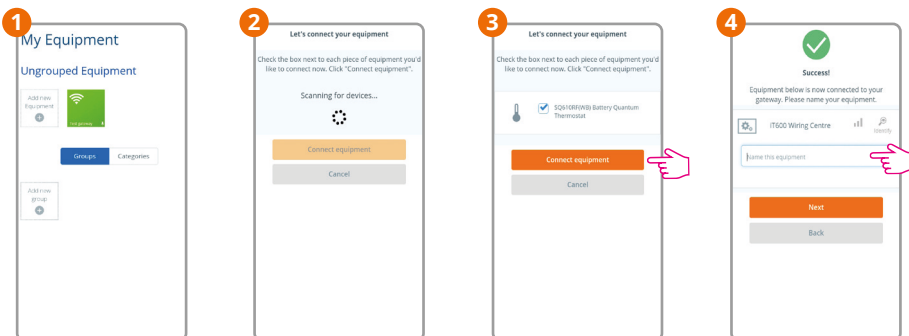


Name the room.

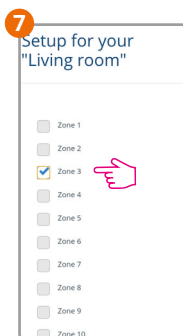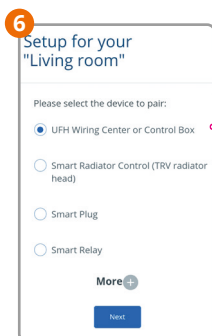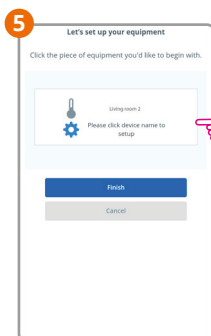



Apply the thermostat to the correct zone.

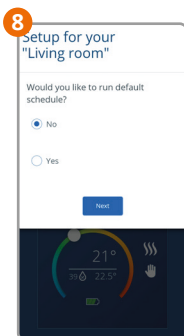

The thermostat can be set to default programme with 2 on times or click no and set the desired program.

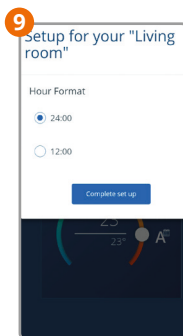

Set the desired time format.

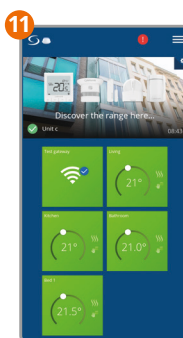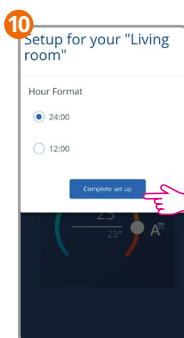


Once all the above steps are complete, you can now repeat the process to add any additional thermostats to the system. Once all your thermostats have been connected, your Salus Smart home app should resemble the image.



### 3. Factory reset

If a factory reset is required, each Quantum thermostat will need to be factory reset separately to the Quantum wiring centre.

#### Quantum dial-RF thermostat

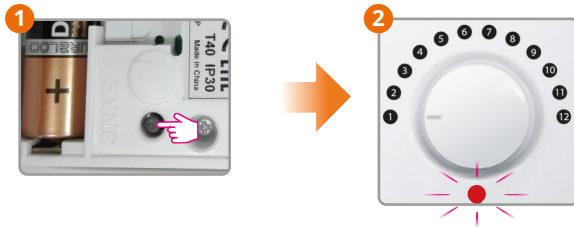

Press the reset button for 5 seconds, then the thermostat will completely reset and remove itself from the ZigBee network.

#### Quantum wiring centre-RF

- Press the menu button
- Ensure all thermostats are reset
- Hold the pair button until G1 & G2 red lights come on and go off again
- Hold the circle button on the Quantum coordinator until the light changes to orange
- Press the Quantum coordinator button again for 5 seconds until it flashes red
- Use a small pin to press the “reset button”

The wiring centre is now reset. Remove the coordinator if connecting to Quantum hub.



info@continal.co.uk  
www.continal.co.uk  
0333 800 1750